


CH10-M HYBRID ASSEMBLY INSTRUCTIONS

www.feelgooduk.net

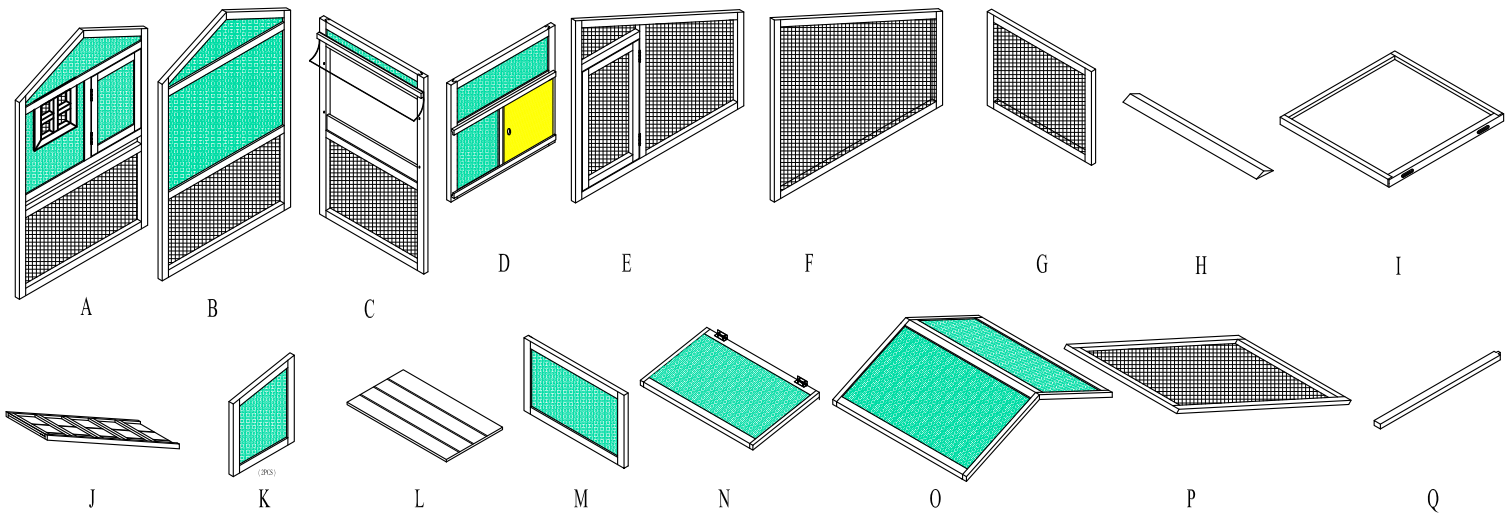


SCREWS :

- ① 30Pcs Ø3.5 x 40
- ② 4Pcs Ø3.5 x 50
- ③ 2Pcs Ø3.5 x 30
- ④ 4Pcs Ø3.0 x 18
- ⑤ 12Pcs Ø3.0 x 16

BOLTS :


- ⑥ 4Pcs M6x35
- ⑦ 2Pcs

STEP : 1

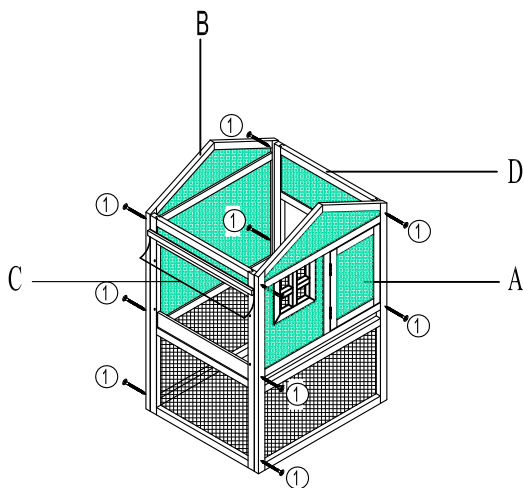


- ① 10Pcs Ø3.5 x 40

STEP : 2

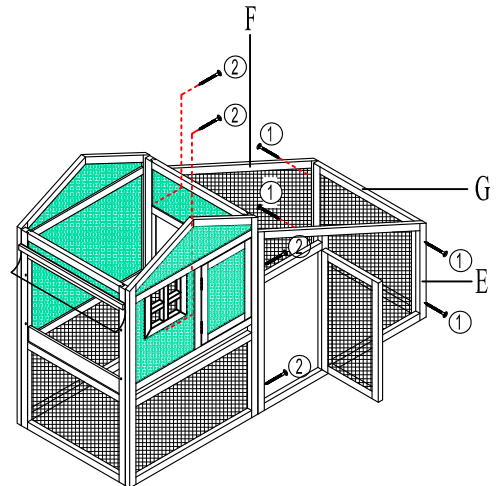


- ① 4Pcs Ø3.5 x 40
- ② 4Pcs Ø3.5 x 50

STEP : 3

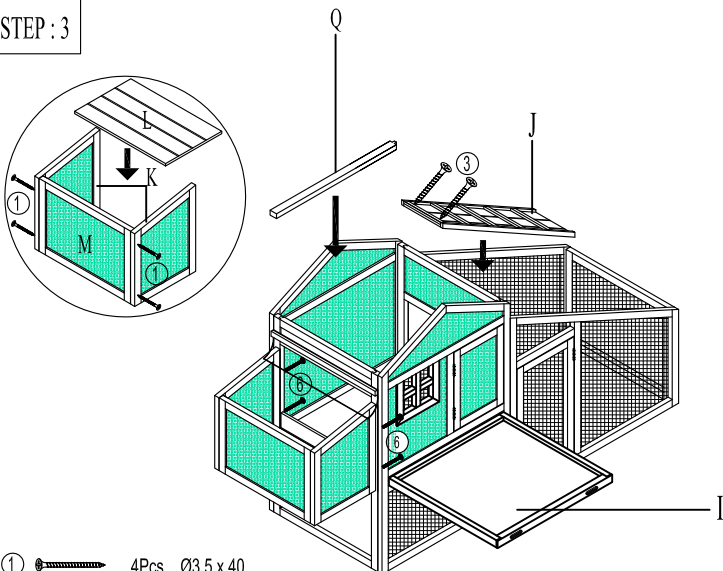

- ① 4Pcs Ø3.5 x 40
- ③ 2Pcs Ø3.5 x 30
- ⑥ 4Pcs M6x35

STEP : 4

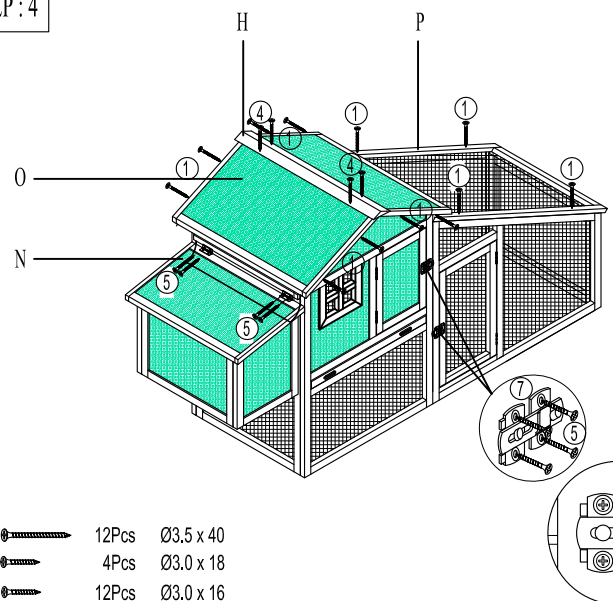

- ① 12Pcs Ø3.5 x 40
- ④ 4Pcs Ø3.0 x 18
- ⑤ 12Pcs Ø3.0 x 16